

# Embedded and ambient systems

## 2021.09.22.


## Practice 2




Méréstechnika és  
Információs Rendszerek  
Tanszék

# Example: Blink project

- Review of Blink project at a source code level
- Note icon  : compiles and loads (Debug active)
- Note icon  : only compiles (IDE mode only)
  - Can my code be compiled?
  - Is there any syntactical error?
- Note icon  : starts the downloaded code
- Note icon  : disconnects and switches IDE mode

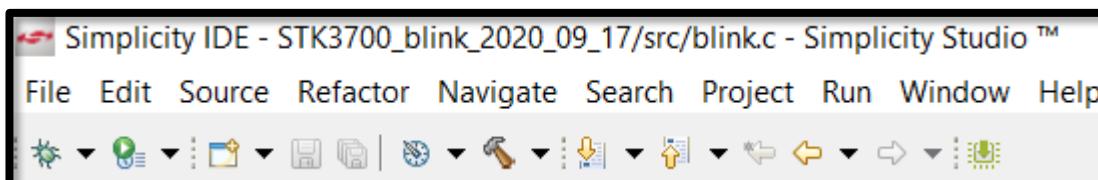

->IDE mode

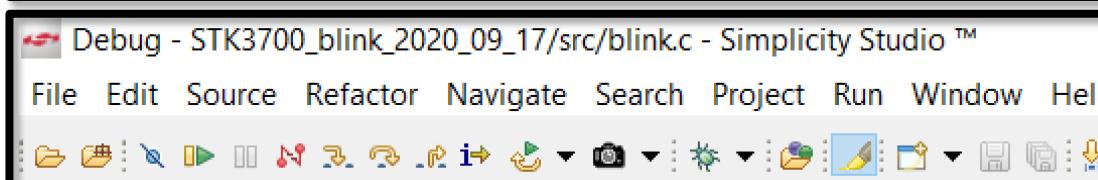

->Debug mode

# Example: Blink project

- Written in C programming language
- Entry point is the main function, this function is called and so the program starts here

```
int main(void)
{
    /* Chip errata */
    CHIP_Init(); → HW errors corrected in SW

    /* If first word of user data page is non-zero, enable Energy Profiler trace */
    BSP_TraceProfilerSetup(); → Real-time data acquisition

    /* Setup SysTick Timer for 1 msec interrupts */
    if (SysTick_Config(CMU_ClockFreqGet(cmuClock_CORE) / 1000)) {
        while (1); → Initialize SysTick timer peripheral that calls
    }                                SysTick_Handler interrupt function in every 1ms
                                         and increments msTicks variable in every 1ms
                                         →
    /* Initialize LED driver */
    BSP_LedsInit(); → Initialize the LEDs
    BSP_LedSet(0); → Initialize LED nr.0

    /* Infinite blink loop */
    while (1) { → In the while loop blinking LED algorithm is implemented
        BSP_LedToggle(0); → Change the state of LED nr.0
        BSP_LedToggle(1); → Change the state of LED nr.1
        Delay(1000); → Wait 1000ms
    }
}
```

```
void SysTick_Handler(void)
{
    msTicks++; → increases msTicks
}
```

Annotations in red:

- CHIP\_Init(); → HW errors corrected in SW
- BSP\_TraceProfilerSetup(); → Real-time data acquisition
- if (SysTick\_Config(CMU\_ClockFreqGet(cmuClock\_CORE) / 1000)) {  
while (1); → Initialize SysTick timer peripheral that calls  
SysTick\_Handler interrupt function in every 1ms  
and increments msTicks variable in every 1ms
- BSP\_LedsInit(); → Initialize the LEDs
- BSP\_LedSet(0); → Initialize LED nr.0
- while (1) { → In the while loop blinking LED algorithm is implemented
- BSP\_LedToggle(0); → Change the state of LED nr.0
- BSP\_LedToggle(1); → Change the state of LED nr.1
- Delay(1000); → Wait 1000ms

# Delay function


```
void Delay(uint32_t dlyTicks) → One input parameter: how many ticks to wait-> 1tick=1ms in this program
{
    uint32_t curTicks; → Create variable curTicks
    curTicks = msTicks; → Value of msTicks is passed to curTicks
    while ((msTicks - curTicks) < dlyTicks) ; → Wait until condition is met (program stucks
}                                            in the while loop until condition is met)
```

msTicks: the current tick (time, keeps increasing by 1ms)

curTicks: equals msTick value when Delay function was called, constant value during the Delay function runs

dlyTicks: time of delay, now it is 1000ms the time to toggle LEDs




- Operation of Delay function:

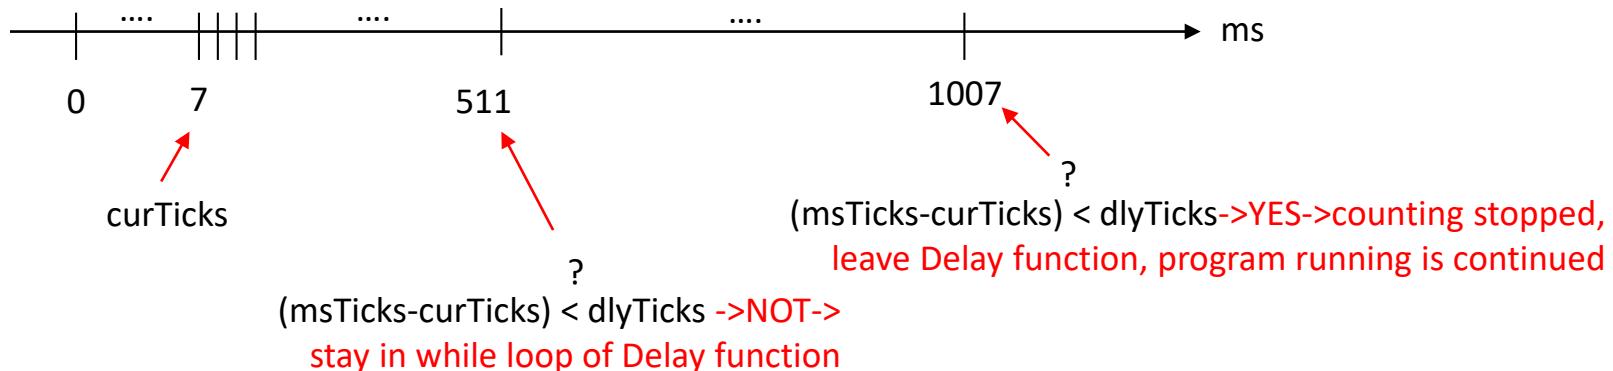

- This Delay function is a blocking wait->program cannot run until 1000ms is elapsed


# Hierarchy of functions

- Project Explorer window and the hierarchy of functions gathered in libraries

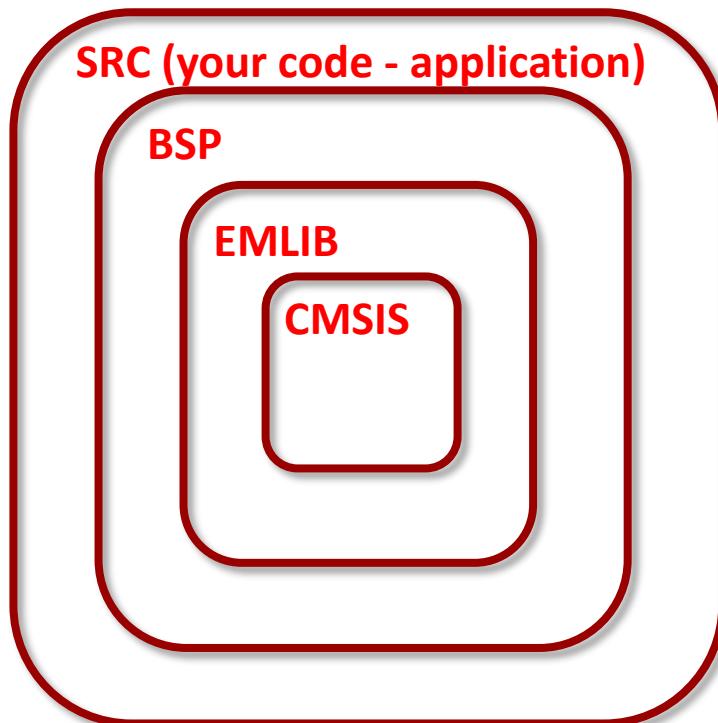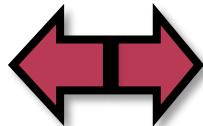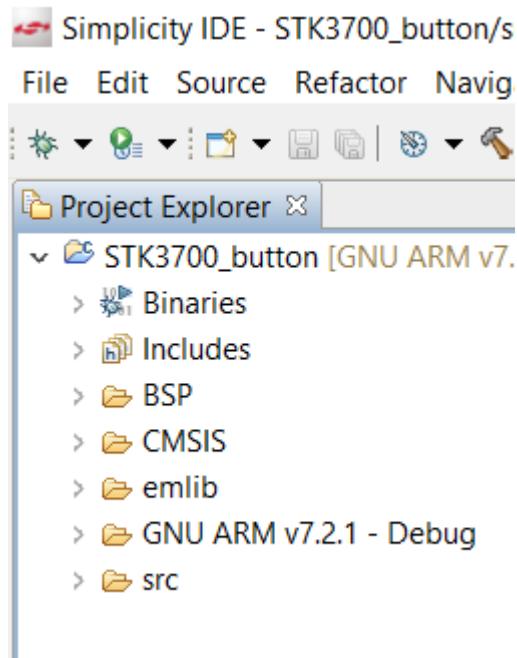

- All levels can be reached from SRC level directly

# Examination of the Blink program

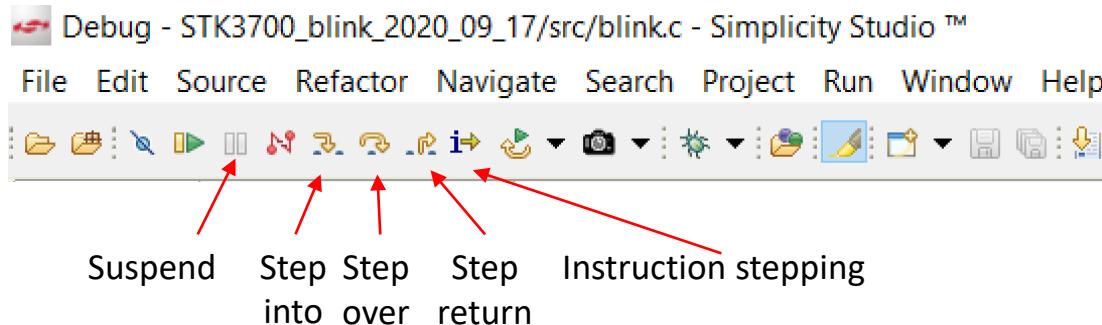

- When the program is suspended it is most probably in the Delay function since LEDs changes quickly and uC runs the Delay function most of the time


|  |                           |   |
|--|---------------------------|---|
|  | Suspend                   | The [Suspend] button halts the MCU.   |
|  | Step Into                 | The [Step Into] button single steps into the first line of a function.  |
|  | Step Over                 | The [Step Over] button single steps over a function, executing the entire function.   |
|  | Step Return               | The [Step Return] button steps out of a function, executing the rest of the function.   |
|  | Instruction Stepping Mode | The [Instruction Stepping Mode] button toggles assembly single stepping. When enabled, single steps will execute a single assembly instruction at a time. See the [Disassembly] view for the assembly code corresponding to the source code at the current line of execution. |

- Changes in variables and register content can be followed easily in Debug mode

# Current consumption as a function of $f_{\text{clk}}$

- Modify the Blink program to measure current consumption as a function of uC clock frequency
- How the clock frequency can be accessed?
  - Insert the appropriate function:
  - `CMU_HFRCOBandSet(cmuHFRCOBand_1MHz);`
- Measure current consumption when clock frequency is set to 1, 7, 11, 14, 21 and 28MHz -> conclusion?

| $f_{\text{clk}}$ [MHz] | I [mA] |
|------------------------|--------|
| 1                      | 1.8    |
| 7                      | 3.68   |
| 11                     | 5.16   |
| 14                     | 6.15   |
| 21                     | 8.17   |
| 28                     | 10.38  |

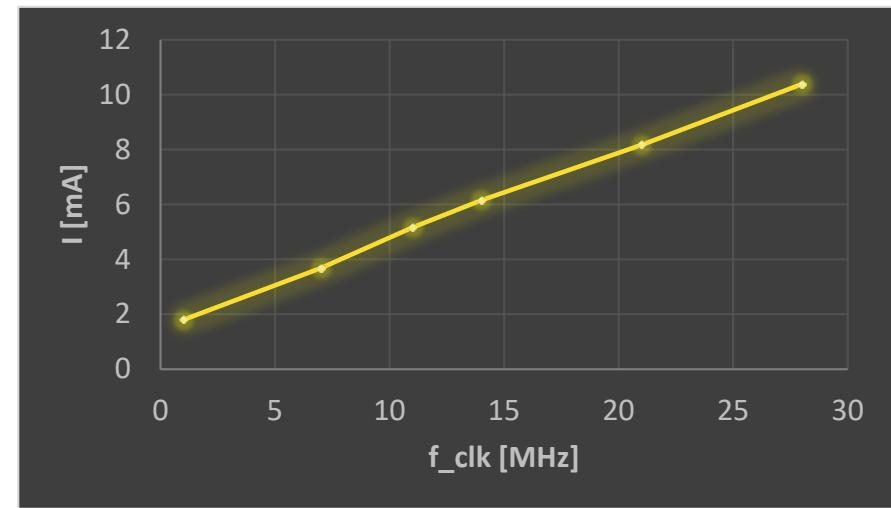

# Hint for measurement of current consumption as a function of f\_clk

```
int main(void)
{
    /* Chip errata */
    CHIP_Init();

    /* If first word of user data page is non-zero, enable Energy
    BSP_TraceProfilerSetup();

    CMU_HFRCOBandSet(cmuHFRCOBand_11MHz);

    /* Setup SysTick Timer for 1 msec interrupts */
    if (SysTick_Config(CMU_ClockFreqGet(cmuClock_CORE) / 1000)) {
        while (1);
    }

    /* Initialize LED driver */
    BSP_LedsInit();
    BSP_LedSet(0);
    BSP_LedSet(1);

    /* Infinite blink loop */
    while (1) {
        //BSP_LedToggle(0);
        //BSP_LedToggle(1);
        Delay(1000);
    }
}
```

# Buttons

- Certain version of SDK does not contain functions for the buttons in the BSP library, but they are available from the manufacturer (can be downloaded from the course web)
  - bsp\_stk\_buttons.c and bsp\_stk\_buttons.h
  - Copy them into the Includes library (see project explorer window)
    - i:\Simplicity\_studio\developer\sdks\gecko\_sdk\_suite\v2.6\hardware\kit\common\bsp\
  - Copy bsp\_stk\_buttons.c file into bsp library
- After opening bsp\_stk\_buttons.h you should use:
  - `BSP.ButtonsInit(void)`-> initialize buttons
  - `BSP_ButtonGet(int btnNo)`-> read button state
  - Do not forget: `#include "bsp_stk_buttons.h"`
- Modify the program to light up LEDx if BTNx is pushed

# Modified code for push buttons

```
/* Initialize LED driver */
BSP_LedsInit();
BSP_LedClear(0);
BSP_LedClear(1);

/* Initialize Buttons */
BSP.ButtonsInit();

/* Infinite button loop */
while (1) {
    if (BSP_ButtonGet(0)) {
        BSP_LedClear(0);
    }else{
        BSP_LedSet(0);
    }
}
```

# The building process (see console)

15:28:17 \*\*\*\* Build of configuration GNU ARM v7.2.1 - Debug for project STK3700\_button \*\*\*\*

make -j4 all

Building file: ../src/button.c

Invoking: GNU ARM C Compiler

```
arm-none-eabi-gcc -g3 -gdwarf-2 -mcpu=cortex-m3 -mthumb -std=c99 '-DDEBUG_EFM=1' '-DEFM32GG990F1024=1' -  
I"/Simplicity_studio/developer/sdks/gecko_sdk_suite/v2.6//hardware/kit/EFM32GG_STK3700/config" -  
I"/Simplicity_studio/developer/sdks/gecko_sdk_suite/v2.6//platform/CMSIS/Include" -  
I"/Simplicity_studio/developer/sdks/gecko_sdk_suite/v2.6//platform/emlib/inc" -  
I"/Simplicity_studio/developer/sdks/gecko_sdk_suite/v2.6//hardware/kit/common/bsp" -  
I"/Simplicity_studio/developer/sdks/gecko_sdk_suite/v2.6//platform/Device/SiliconLabs/EFM32GG/Include" -O0 -  
Wall -c -fmessage-length=0 -mno-sched-prolog -fno-builtin -ffunction-sections -fdata-sections -MMD -MP -  
MF"src/button.d" -MT"src/button.o" -o "src/button.o" "../src/button.c"
```

Finished building: ../src/button.c

Building target: STK3700\_button.axf

Invoking: GNU ARM C Linker

```
arm-none-eabi-gcc -g3 -gdwarf-2 -mcpu=cortex-m3 -mthumb -T "STK3700_button.ld" -Xlinker --gc-sections -Xlinker -  
Map="STK3700_button.map" --specs=nano.specs -o STK3700_button.axf "./BSP/bsp_bcc.o" "./BSP/bsp_stk.o"  
"./BSP/bsp_stk_buttons.o" "./BSP/bsp_stk_leds.o" "./BSP/bsp_trace.o" "./CMSIS/EFM32GG/startup_gcc_efm32gg.o"  
"./CMSIS/EFM32GG/system_efm32gg.o" "./emlib/em_assert.o" "./emlib/em_cmu.o" "./emlib/em_core.o"  
"./emlib/em_ebi.o" "./emlib/em_emu.o" "./emlib/em_gpio.o" "./emlib/em_system.o" "./emlib/em_usart.o"  
"./src/button.o" -WI,--start-group -lgcc -lc -lnosys -WI,--end-group
```

Finished building target: STK3700\_button.axf

# The building process (see console)

Building hex file: STK3700\_button.hex

```
arm-none-eabi-objcopy -O ihex "STK3700_button.axf" "STK3700_button.hex"
```

Building bin file: STK3700\_button.bin

```
arm-none-eabi-objcopy -O binary "STK3700_button.axf" "STK3700_button.bin"
```

Building s37 file: STK3700\_button.s37

```
arm-none-eabi-objcopy -O srec "STK3700_button.axf" "STK3700_button.s37"
```

Running size tool

```
arm-none-eabi-size "STK3700_button.axf" -A
```

STK3700\_button.axf :

| section      | size | addr      |
|--------------|------|-----------|
| .text        | 6612 | 0         |
| .data        | 116  | 536870912 |
| .bss         | 32   | 536871028 |
| .heap        | 3072 | 536871064 |
| .stack_dummy | 1024 | 536871064 |
| .comment     | 126  | 0         |
| .debug_macro | 7809 | 0         |

..... Some more lines.....


.debug\_frame 3764 0

Total 960914

15:28:26 Build Finished (took 8s.456ms)



# The clean process (see console)

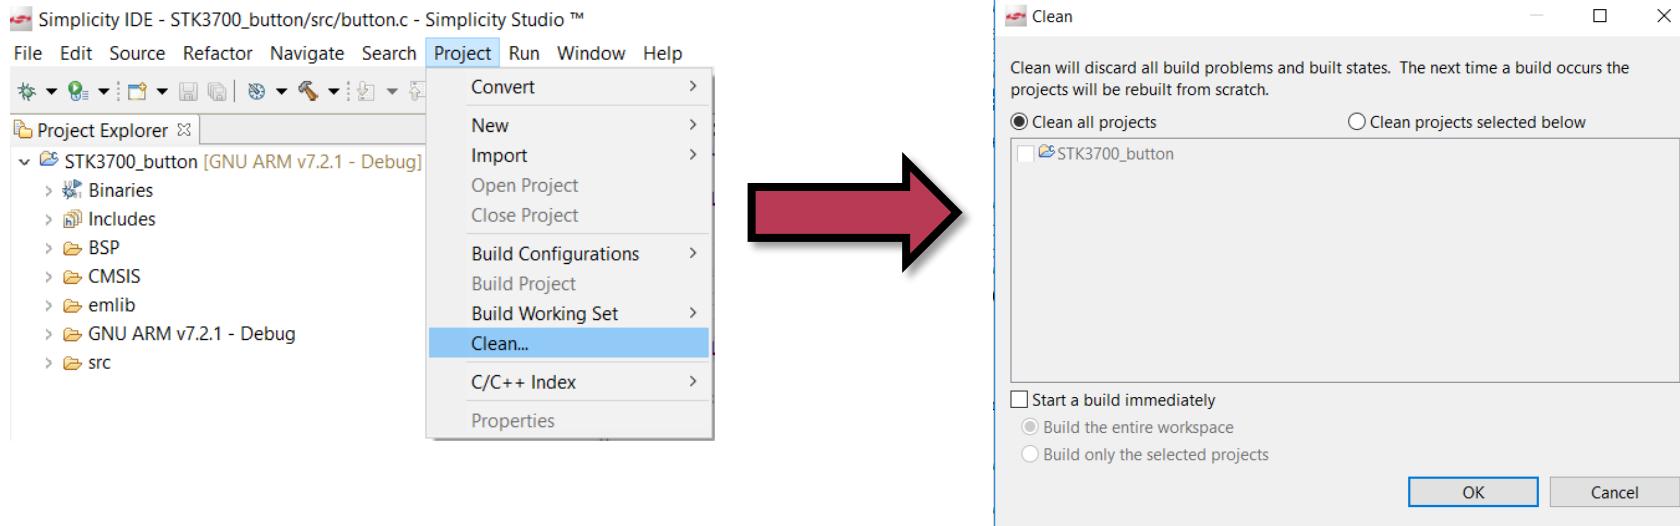

15:48:05 \*\*\*\* Clean-only build of configuration GNU ARM v7.2.1 - Debug for project STK3700\_button \*\*\*\*

make -j4 clean

```
rm -rf ./src/button.o ./emlib/em_assert.o ./emlib/em_cmu.o ./emlib/em_core.o ./emlib/em_ebi.o ./emlib/em_emu.o  
./emlib/em_gpio.o ./emlib/em_system.o ./emlib/em_usart.o ./CMSIS/EFM32GG/startup_gcc_efm32gg.o  
./CMSIS/EFM32GG/system_efm32gg.o ./BSP/bsp_bcc.o ./BSP/bsp_stk.o ./BSP/bsp_stk_buttons.o ./BSP/bsp_stk_leds.o  
./BSP/bsp_trace.o ./src/button.d ./emlib/em_assert.d ./emlib/em_cmu.d ./emlib/em_core.d ./emlib/em_ebi.d  
./emlib/em_emu.d ./emlib/em_gpio.d ./emlib/em_system.d ./emlib/em_usart.d  
./CMSIS/EFM32GG/system_efm32gg.d ./BSP/bsp_bcc.d ./BSP/bsp_stk.d ./BSP/bsp_stk_buttons.d ./BSP/bsp_stk_leds.d  
./BSP/bsp_trace.d STK3700_button.axf
```

15:48:05 Build Finished (took 658ms)